

## INSTALLATION INSTRUCTIONS FOR (RAI-LED) Remote Alarm Indicator LED

The information contained in this installation instruction is a quick reference guide. For detailed system information refer to the panel manufacturer's installation manual. This instruction will not address specific programming procedure.

### GENERAL DESCRIPTION

This instruction applies to the RAI-LED, which is a remote alarm indicator LED. The RAI-LED can provide remote visual indication to an analog addressable detectors that are installed above ceiling areas in the building. RAI-LED is intended to be mounted on to a single gang electrical box.


### MOUNTING REQUIREMENTS

The RAI-LED remote alarm indicator LED is mounted as shown in Figures 1.

### WIRING

NOTE: All wiring must conform to local codes, ordinances and regulations

- 1) Install RAI-LED wiring in accordance with the job drawings and appropriate wiring diagram.
- 2) Secure the RAI-LED to a U.L. listed electrical box

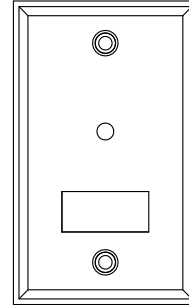

| SPECIFICATIONS              |   |
|-----------------------------|---|
| Supply Voltage              | Rated Range 17 - 41 VDC                                   |
| Current Consumption         | 7mA maximum   |
| Operating Temperature Range | 0°C (32°F) ~ 49°C (120°F)                                 |
| Storage Temperature         | -30°C (-22°F) ~ 70°C (158°F)                              |
| Maximum Relative Humidity   | Up to 90% RH non-condensing                               |
| Environment                 | For Dry Indoor Use Only                                   |
| Dimensions                  | 2.73"W X 4.5"H X .15"D                                    |
| Compatible Bases            | HSB-NSA-6, YBN-NSA-4, ASB, SCI-B4, SCI-B6                 |
| Compatible Detector/Sensors | AIE-EA, ALG-V, ALK-V, ATG-EA, ACA-V, ALN-V, ACC-V, ATJ-EA |

### TYPICAL WIRING/MOUNTING DIAGRAM

